


LANDSCAPE WALL

RUMBLED WALL

The Rumbled Wall system provides rustic building blocks for your outdoor hardscape projects. Rumbled Wall's weathered appearance offers a natural look and feel, adding texture and depth to vertical applications such as raised planting beds, firepits, columns, and seatwalls. Rumbled Wall can be assembled in a variety of configurations and orientations, limited only by your imagination.

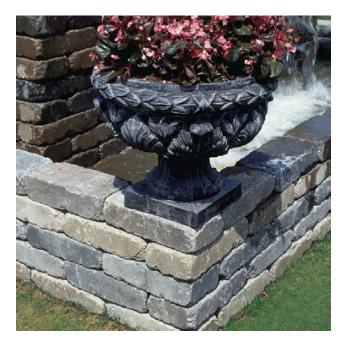







#520 - 4x8x8

#518 - 4x8x12

#519 - 4x8x16

Before specifying a specific product, please confirm availability with your local Keystone Hardscapes producer.

| PRODUCT | DIMENSIONS | | | WEIGHT/ | PRODUCT # |
|---------|----------------------|-----------------------|----------------------|------------|-----------|
| | Height | Width | Depth | UNIT (LBS) | TRODUCT# |
| 4x8x8 | 4" 101.6mm | 8" 203.2mm | 8" 203.2mm | 21 | 520 |
| 4x8x12 | 4" 101.6mm | 12" 304.8mm | 8" 203.2mm | 30.7 | 518 |
| 4x8x16 | 4" 101.6mm | 16" 406.4mm | 8" 203.2mm | 41 | 519 |

FEATURES & BENEFITS

Maximum Versatility and Performance

- Made of durable concrete with iron oxide pigments that resist fading in extended UV exposure. Meets or exceeds applicable requirements of ASTM C1372 for compressive strength, absorption and dimensional tolerance.
- Capable of creating stunning outdoor living elements: planters, columns, fire pits, seatwalls and more.
- Install for retaining walls up to 2 ft. high.

Ease of Installation

- Install with exterior construction grade adhesive.
- Versatile uncored block makes jobsite sawing and splitting easy.

Aesthetics

• Rumbling process breaks and softens sharp edges and corners to create the timeless look of weathered cut stone.



















Note: Unit color, dimensions, weight, and availability varies by manufacturer.



INSTALLATION INSTRUCTIONS



STEP 1: Site Preparation and Excavation Stake out the area where the wall will be installed. Dig a trench 16" wide and 10" deep.



STEP 3: Leveling and Laying Stones Lay stones side-by-side and check for level. Stack additional courses with the bond staggered on the course below.



STEP 2: Base Preparation Add 6" of paver base and tamp in trench to create a rigid and level surface.



STEP 4:
Stack Stones
Stack stones in courses,
staggering the joints, to
your desired wall height. All
freestanding above grade
wall units shall be secured
with an exterior concrete
adhesive.

NOTE: Colors are shown as accurately as possible in brochures and samples, but due to the nature of the product, regional color differences and variables in print reproduction, colors may not match exactly.

Complete installation and specification details are available by contacting your Keystone Hardscapes Sales Representative.



www.keystonehardscapes.com

